


## Ring RING ALARM CLOCK WITH DATE AND TEMPERATURE Kat.No. 98.1020

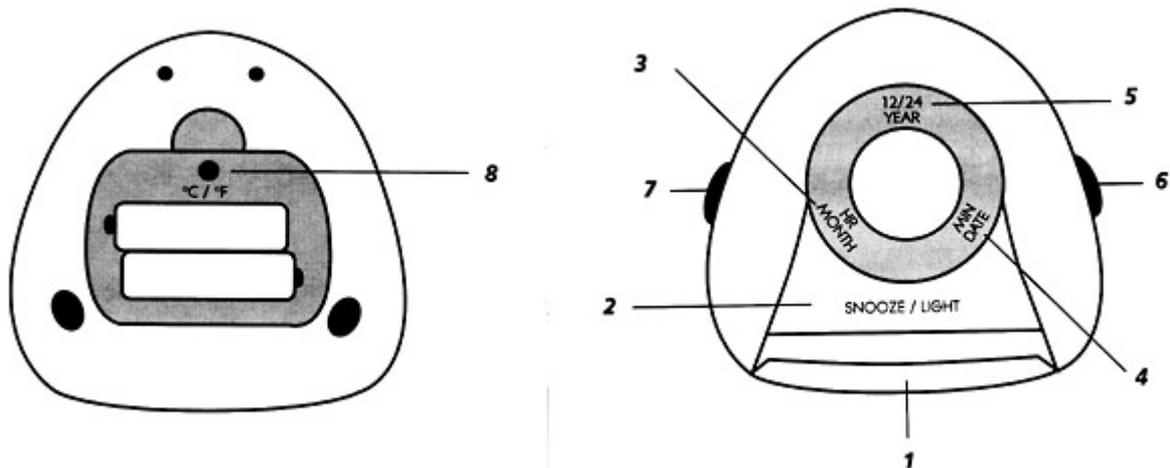

### **Operating Elements:**

1. Display for time/alarm time, calendar and temperature
2. Alarm stop, light and snooze button
3. HR/MONTH button for setting hours/months
4. MIN/DATE button for setting minutes/the date
5. Button for 12 hour (12HR) or 24 hour time system (24HR) and weekday (YEAR)
6. sliding switch for normal mode (LOCK), setting of alarm time (ALM SET), time (TIME SET) and CALENDAR
7. sliding switch for snooze function (SNOOZE), alarm on (ALM ON), alarm off (ALM OFF)
8. °C/°F switch

### **Operation:**

Open the battery compartment and insert the batteries, polarity as illustrated. Pull off the protection tolon the display. The unit is now ready to use.

### **Setting of calendar:**

- slide switch 6 to the position CALENDAR.
- Press MONTH, DATE and DAY buttons (3-5) to set the desired calendar display.

### **Setting of time:**

- slide switch 6 to the position TIME SET.
- Press HR button to set the hours and MIN button to set the minutes.

### **12 hour or 24 hour time system:**

- simply slide switch 5 to choose 12 HR or 24 HR system. In 12HR format, PM will appear on the display indicating PM hours.

### **Setting of alarm time:**

- slide switch 6 to the position ALM SET. The alarm time is flashing. ALARM appears on the display.
- Press HR button to set the hours and MIN button to set the minutes of your desired alarm time.

- slide switch 7 to ALM ON position. The alarm symbol appears on the display. The alarm function is activated.

**Normal mode:**

- After setting time and alarm time slide switch 6 to the position LOCK.

**snooze function:**

- slide switch 7 to the position SNOOZE after setting the alarm time. The snooze symbol Zz appears on the display. The snooze function is activated.

- Once the alarm starts to ring, you can activate the snooze function by pressing button 2 (SNOOZE, LIGHT). The alarm will be interrupted for 5 minutes.

- To deactivate the snooze function slide switch 7 to the position ALM ON. To stop the alarm completely, slide switch 7 to the ALM OFF position.

**Backlight:**

- Press the button 2 (SNOOZE, LIGHT) to light up the display.

**°C/°F-switch:**

- By pressing the °C/°F button 8 in the battery compartment with a pointed object the temperature unit can be changed from °C to °F.

**Maintenance:**

- Replace the batteries when the display becomes weak or the alarm level declines. Do not dispose of empty batteries in household waste. Take them to special local collection sites.

- Do not expose the instrument to extreme temperatures, vibration or shock.

- Clean it with a soft damp cloth. Do not use solvents or scouring agents.

- Please do not try to repair the unit. Contact the original point of purchase. Please change the batteries before complaining. No guarantee if the instrument is handled or opened improperly.