

WIRELESS 868MHZ WEATHER STATION

Instruction Manual

Cat. No. 35.1064.10.50.IT

Thank you for choosing this wireless weather station from TFA.

BEFORE YOU USE IT

Please be sure to read the instruction manual carefully.

This information will help you to familiarise yourself with your new device, learn all of its functions and parts, find out important details about its first use and how to operate it, and get advice in the event of faults.

Following the instruction manual for use will prevent damage to the device and loss of your statutory rights arising from defects due to incorrect use.

We shall not be liable for any damage occurring as a result of not following these instructions. Likewise, we take no responsibility for any incorrect readings and for any consequences which may result from them.

Please take particular note of the safety advice!

Please look after this manual for future reference.

SCOPE OF SUPPLY:

- Weather station (basic unit)
- Outdoor transmitter
- Batteries (4 x AA, IEC LR6, 1.5V)

- Instruction manual

FIELD OF OPERATION AND ALL OF THE BENEFITS OF YOUR NEW WEATHER STATION AT A GLANCE:

- DCF-77 Radio controlled time with manual setting options
- DCF Time reception ON/OFF
- 12/24 hour display
- Hour, minute and second time display
- Calendar (weekday, date, month and year)
- Time zone option -2h to +5h
- Alarm with snooze function
- Snooze setting
- Weather forecasting with 15 easy-to-read weather forecast signs featured by "Weather boy"
- Weather forecasting icon sensitivity setting
- Temperature display in degrees Celsius (°C) or Fahrenheit (°F) selectable
- Indoor and outdoor temperature display with MIN/MAX recording
- Indoor humidity reading displayed as RH% with MIN/MAX recordings
- All MIN/MAX temperature recordings show date and time received
- All MIN/MAX recordings can be reset
- Display of sunrise time, sunset time and sun duration in 39 cities
- 12 moon phases display throughout the year
- Can take up to three outdoor transmitters

- LCD contrast setting
- Low battery indicator
- LED backlight
- Table standing/ wall mounting

FOR YOUR SAFETY:

- The product is exclusively intended for the field of application described above. The product should only be used as described within these instructions.
- Unauthorised repairs, modifications or changes to the product are prohibited.
- The product is not to be used for medical purpose or for public information, but is intended solely for home use.



Caution!

Risk of injury:


- Keep this instrument and the batteries out of reach of children.
- Batteries must not be thrown into the fire, short-circuited, taken apart or recharged.
Risk of explosion!
- Batteries contain harmful acids. Low batteries should be changed as soon as possible to prevent damage caused by a leaking battery. Never use a combination of old and new batteries together or batteries of different types. Wear chemical-resistant protective gloves and glasses when handling leaked batteries.

! Important information on product safety!


- Do not expose the instrument to extreme temperatures, vibration or shock.
- The outdoor transmitter is protected against splash water, but is not watertight. Choose a shady and dry position for the transmitter.

ELEMENTS

The weather station

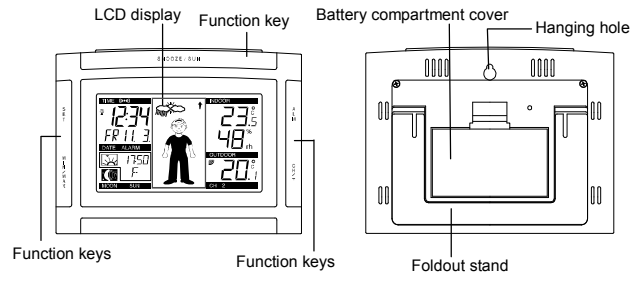


The outdoor temperature transmitter

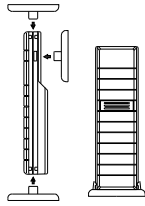

- Remote transmission of outdoor temperature to weather station by 868 MHz
- Shower proof casing
- Wall mounting case
- Mounting at a sheltered place. Avoid direct rain and sunshine


INSTALL AND REPLACE BATTERIES IN THE TEMPERATURE TRANSMITTER

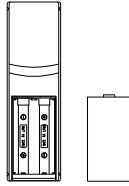

The temperature transmitter uses 2 x AA, IEC LR6, 1.5V battery. To install and replace the batteries, please follow the steps below:

1. Remove the battery compartment cover at the back of the transmitter.
2. Insert the batteries, observing the correct polarity (see marking).
3. Replace the battery compartment cover on the unit.

INSTALL AND REPLACE BATTERIES IN THE WEATHER STATION

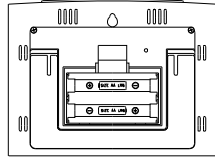

The weather station uses 2 x AA, IEC LR6, 1.5V batteries. To install and replace the batteries, please follow the steps below:

1. Remove the cover at the back of the weather station.
2. Insert batteries observing the correct polarity (see marking).
3. Replace compartment cover.

Battery replacement

- Replace the batteries when the battery symbol of the weather station appears above the indoor temperature.
- When the batteries of the transmitter are used up, the low battery icon appears above the outdoor temperature display.

Note:

In the event of changing batteries in any of the units, all units need to be reset by following the setting up procedures. This is because a security code is assigned by the transmitter at start-up and this code must be received and stored by the weather station in the first 3 minutes of power being supplied to it.

SETTING UP:

When one transmitter is used:

1. First, insert the batteries into the temperature transmitter. (see "**Install and replace batteries in the temperature transmitter**").
2. Immediately after and within 45 seconds, insert the batteries into weather station (see "**Install and replace batteries in the weather station**"). Once the batteries are in place, all segments of the LCD will light up briefly. Following the time as 0:00 and the "Weather boy" icon will be displayed. If these are not displayed after 60 seconds, remove the batteries and wait for at least 10 seconds before reinserting them.
3. After inserting the batteries, the weather station will start receiving data from the transmitter. The outdoor temperature and the signal reception icon should then be displayed on the weather station. If this does not happen after 3 minutes, the batteries will need to be removed from both units and reset from step 1.
4. In order to ensure sufficient 868 MHz transmission however, this should under good conditions be a distance no more than 100 meters between the final position of the weather station and the transmitter (see notes on "**Positioning**" and "**868 MHz Reception**").
5. Once the remote temperature has been received and displayed on the weather station, the DCF time (radio controlled time) code reception is automatically started after 30 seconds. This takes typically between 3-5 minutes in good conditions. If after 10 minutes, the DCF time has not been received, press the SET button to manually enter a time initially.

When more than one transmitter is used:

1. User shall remove all the batteries from the weather station and transmitters and wait for 60 seconds if setting has been done with one transmitter before.
2. Insert the batteries to the first transmitter.
3. Within 25 seconds of powering up the first transmitter, insert the batteries to the weather station. Once the batteries are in place, all segments of the LCD will light up briefly. Following time as 0:00 and the weather boy icon will be displayed. If they are not shown in LCD after 60 seconds, remove the batteries and wait for at least 60 seconds before reinserting them.
4. The outdoor temperature from the first transmitter (channel 1) should then be displayed on the weather station. Also, the signal reception icon will be displayed. If this does not happen after 2 minutes, the batteries will need to be removed from both units and reset from step 1.
5. Insert the batteries to the second transmitter as soon as the outdoor temperature readings from the first transmitter are displayed on the weather station.
Note: User shall insert the batteries into the second transmitter within 10 seconds of reception of the first transmitter.
6. The outdoor data from the second transmitter and the "channel 2" icon should then be displayed on the Weather station. If this does not happen after 2 minute, the batteries will need to be removed from all the units and reset from step 1.
7. Insert the batteries to the third transmitter as soon as the "channel 2" icon and outdoor data are displayed on the weather station. Then within 2 minutes, the channel 3

outdoor data from the third transmitter will be displayed and the channel icon will display "3" once the third transmitter is successfully received. If this is not happen, user shall restart the setting up from step 1.

Note:

- User shall insert the batteries into the third transmitter within 10 seconds of reception of the second transmitter.
 - And user may require to check the displayed readings on the weather station against those shown on the transmitters in order to recognize the channel no. of each transmitter.
8. In order to ensure sufficient 868 MHz transmission however, this should under good conditions be a distance no more than 100 meters between the final position of the weather station and the transmitter (see notes on "**Positioning**" and "**868 MHz Reception**").

IMPORTANT:

Transmission problems will arise if the setting for additional sensors is not followed as described above. Should transmission problems occur, it is necessary to remove the batteries from all units and start again the set-up from step 1.

9. Once the remote temperature has been received and displayed on the weather station, the DCF time (radio controlled time) code reception is automatically started. This takes typically between 3-5 minutes in good conditions. If after 10 minutes, the DCF time has not been received, press the SET button to manually enter a time initially.

DCF RADIO CONTROLLED TIME

The time base for the radio controlled time is a Cesium Atomic Clock operated by the Physikalisch Technische Bundesanstalt Braunschweig which has a time deviation of less than one second in one million years. The time is coded and transmitted from Mainflingen near Frankfurt via frequency signal DCF-77 (77.5 kHz) and has a transmitting range of approximately 1,500 km. Your radio-controlled clock receives this signal and converts it to show the precise time in summer or wintertime.

The quality of the reception depends greatly on the geographic location. In normal cases, there should be no reception problems within a 1,500 km radius of Frankfurt.

DCF reception is done twice daily at 02:00 and 03:00 am. If the reception is not successful at 03:00 am, then the next reception takes place the next hour and so on until 06:00am, or until the reception is successful. If the reception is not successful at 06:00 am, then the next attempt will take place the next day at 02:00 am.

If the tower icon flashes, but does not set the time or the DCF tower does not appear at all, then please take note of the following:


- Recommended distance to any interfering sources like computer monitors or TV sets is a minimum of 1.5 - 2 meters.
- Within ferro-concrete rooms (basements, superstructures), the received signal is naturally weakened. In extreme cases, please place the unit close to a window and/ or point its front or back towards the Frankfurt transmitter.

- During nighttime, the atmospheric disturbances are usually less severe and reception is possible in most cases. A single daily reception is adequate to keep the accuracy deviation below 1 second.

FUNCTION BUTTONS:

Weather station:

The weather station has five easy to use function buttons.

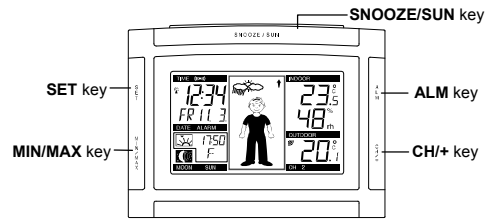

SET button (setting):

- To enter the set mode for the following functions: LCD contrast, Time zone, Time Reception ON/OFF, 12/24 hour display, Manual time, Year, Date, Sunrise/ sunset city location, Snooze time duration, °C/°F, and weather forecast sensitivity settings.

- To toggle between the display of "Weekday + date + month", "Second", "Alarm time", and "Date + month + year"
- To press and hold for 3 seconds to reset at the same time the maximum/ minimum temperature and humidity records of indoor and the currently selected outdoor channel (will reset all records to current level)
- To stop the alarm
- To switch on the backlight

MIN/ MAX

- To toggle between the maximum/ minimum outdoor temperature and maximum/minimum indoor temperature and humidity data

Note: The time/date shown is corresponding to MIN/MAX temperature data.

- To stop the alarm
- To switch on the backlight

ALM button (alarm)

- Press for about 3 seconds to enter the Alarm setting mode
- To activate/ deactivate the alarm
- To stop the alarm
- To switch on the backlight


CH/ + button

- To toggle between the outdoor transmitters 1, 2 and 3 (if more than 1 transmitter is used)
- To adjust LCD contrast, time zone, time reception ON/OFF, 12/24 hour display, hour, minute, year, month, day, snooze time duration, °C/ °F and weather forecasting icon sensitivity in setting modes
- To adjust the alarm time in alarm setting mode
- To stop the alarm
- To switch on the backlight

SNOOZE/ SUN button

- To activate the snooze function for the alarm
- To toggle between the sunrise time, sunset time, sun duration in the sun display
- To exit manual setting mode and alarm setting mode
- To switch on the backlight

LCD SCREEN:

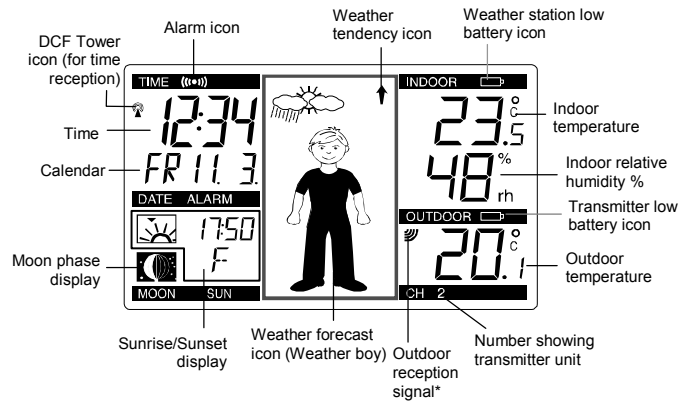

* When the signal is successfully received by the weather station, the outdoor transmission icon will be switched on. (If not successful, the icon will not be shown on LCD). The user can then easily see whether the last reception was successful (icon on) or not (icon off). On the other hand, the short blinking of the icon shows that a reception is currently taking place.

For better distinctness the LCD screen is split into 5:

Section 1 - TIME AND CALENDAR

- In normal mode display of radio controlled time.
- A reception tower symbol will be shown indicating that the DCF-77 time signal is scanned for (flashing) or received (steady).

Note: The symbol will not be shown when radio time reception is not successful or when time reception function is turned off.

- Display of "Weekday + date + month", "Second", "Alarm time" or "Date + month + year"
- In normal display, the alarm icon will be shown when the alarm is turned on. Or when the snooze function is activated, the alarm icon will be flashing.

Section 2 - MOON PHASE AND SUNRISE / SUNSET

- Display the sunrise, sunset, and sun duration time
- Display the 12 different moon phase

Section 3 – WEATHER ICON (featured by weather boy)

- Display of the weather to be expected in form of 15 fancy weather symbols (featured by weather boy) which change their appearance depending on the air pressure development and the current outdoor temperature.
- Format of the weather boy icons refers to the "**WEATHER FORECAST AND TENDENCY**"

Section 4 - INDOOR TEMPERATURE AND HUMIDITY

- Display of the current indoor temperature and humidity.
- By pressing the MIN/ MAX button, display of the stored MIN/MAX indoor temperature and humidity, with simultaneous display of MIN/ MAX symbol in Section 5.

Section 5 - OUTDOOR TEMPERATURE

- Display of the current outdoor temperature.
- By pressing the MIN/ MAX button, display of the stored MIN/MAX outdoor temperature with simultaneous display of a MIN or MAX symbol.
- By pressing the CH/ + button, display of outdoor sensors (up to three outdoor transmitters). The number 1, 2 or 3 will be shown.
- A signal reception symbol will be shown indicating that receiver is receiving outdoor temperature.

MANUAL SETTINGS

The following manual settings can be done in the setting mode:

- LCD contrast setting

- Time zone setting
- Time reception ON/OFF setting
- 12/24-Hour setting
- Manual time setting
- Calendar setting
- Sunrise/sunset and city location
- Snooze setting
- °C/ °F setting
- Weather forecasting icon sensitivity setting

Press and hold the SET button for about 3 second to advance to the setting mode:


LCD CONTRAST SETTING



The LCD contrast can be set to 8 different levels to suit the user needs (default LCD contrast setting is LCD 5). To set the desired contrast level:

1. The above display will be seen. Press the CH/ + button to select the level of contrast desired.
2. Press the SET button to confirm and enter the "**Time zone setting**" or exit the setting mode by pressing the SNOOZE/ SUN button.

TIME ZONE SETTING

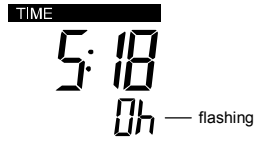

The time zone default of the weather station is 0. To change to another time zone:

1. Press the SET button after completing the LCD contrast setting in order to enter the time zone setting (flashing).
2. Using the CH/ + button, set the time zone. The range runs from -2h to +5h in consecutive in 1 hour intervals.
3. Press the SET button to confirm and enter the "**Time reception ON/OFF setting**" or exit the setting mode by pressing the SNOOZE/ SUN button.

TIME RECEPTION ON/OFF SETTING

In area where reception of the DCF-77 time is not possible, the DCF-77 time reception function can be turned OFF. The clock will then work as a normal Quartz clock (Default setting is ON).

TIME

Flashing (time reception icon)

OFF

ON — Digit flashing

1. The digit "ON" and the time reception icon will start flashing on the LCD.
2. Use the CH/ + button to turn OFF the time reception function.
3. Confirm with the SET button and enter the "12/24-Hour time display setting" or exit the setting mode by pressing the SNOOZE/ SUN button.

Note:

If the time reception function is turned OFF manually, the clock will not attempt any reception of the DCF time as long as the time reception OFF function is activated. The time reception icon will not be displayed on the LCD.

12/24 HOUR TIME DISPLAY SETTING

TIME

24h — flashing

1. After setting time reception ON/OFF, press the SET button, "12h" or "24h" flashes in the LCD. (default 24 h)
2. Press the CH/ + button to select the "12h" or "24h" display mode.
3. Press the SET again to confirm and to enter the **"Manual time setting"** or exit the setting mode by pressing the SNOOZE/ SUN button.

Note: When 24h mode display is selected, the calendar format will be date and month display. When 12h mode display is selected, the calendar format will be month and date display.

MANUAL TIME SETTING

In case the weather station is not able to detect the DCF-signal (disturbances, transmitting distance, etc.), the time can be manually set. The clock will then work as a normal quartzclock.




1. The hour and minute digits start flashing in the time display section.
2. Use the CH/ + button to adjust the hours and then press SET button to go to the minute setting.

3. The minute will be flashing. Press the CH/ + button to just the minutes.
4. Confirm with the SET button and enter the "Calendar setting" or exit the setting mode by pressing the SNOOZE/ SUN button.

Note:

The unit will still try to receive the signal at each full hour despite it being manually set. When it does receive the signal, it will change the manually set time into the received time. During reception attempts the DCF tower icon will flash. If reception has been unsuccessful, then the DCF tower icon will not appear but reception will still be attempted the following hour.

CALENDAR SETTING

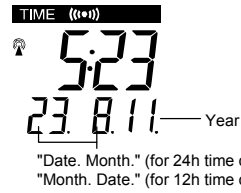

"Date. Month." (for 24h time display)
"Month. Date." (for 12h time display)


The date default of the weather station is 1. 1. of the year 2011 after initial set-up. Once the radio-controlled time signals are received, the date is automatically updated. However, if the signals are not received, the date can also be set manually. To do this:

1. Using the CH/ + button, set the year required. The range runs from 2011 to 2029 (default is 2011).
2. Press the SET button to enter the month setting mode.
3. The month digit will be flashing. Press the CH/ + button to set the month and then press the SET button to go to the date setting.
4. The date digit will be flashing. Press the CH/ + button to set the date.
5. Confirm with the SET button and enter the "**Sunrise, sunset and city location**" or exit the setting mode by pressing the SNOOZE / SUN button.

SUNRISE, SUNSET AND CITY LOCATION

The weather station will automatically calculate the sunrise, sunset and sun duration time based on the city location and the set date. (see "**Sun setting**")

1. The short form of city name will start flashing (default "F"). Using the CH/ + button, select the city location:

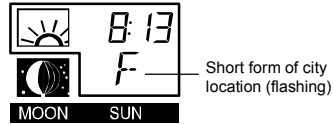


39 cities can be chosen from and every city is displayed in short-form (e.g.: AMS --> Amsterdam).

The cities are displayed as follows:

F - Frankfurt	LYO - Lyon	PAR - Paris	BAI - Bari
FL - Flensburg	M - München	ROM - Roma	BAR - Barcelona
H - Hannover	MAD - Madrid	S - Stuttgart	BOL - Bologna
HB - Bremen	MAR - Marseille	SB - Saarbrücken	BOR - Bordeaux
HEL - Helsinki	MD - Magdeburg	SEV - Sevilla	BRU - Brüssel
HH - Hamburg	MIL - Milano	STO - Stockholm	CPH - Copenhagen
HRO - Rostock	MZ - Mainz	VIE - Vienna (Wien)	D - Düsseldorf
INS - Innsbruck	N - Nürnberg	ZRH - Zürich	DD - Dresden
LDN - London	NAN - Nantes	AMS - Amsterdam	EF - Erfurt
LUX - Luxemburg	OSL - Oslo	B - Berlin	

- Confirm with the SET button and enter the **"Snooze setting"** or exit the setting mode by pressing the SNOOZE / SUN button.

SNOOZE SETTING:

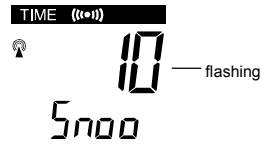

The snooze time can be set OFF or to a maximum time of 30 minutes (default is 10 minutes):

1. The snooze time (in minute) digit will be flashing. Use the CH/ + button to set the snooze time (in minute). Each pressing of the button will increase the snooze time by 5 minutes. The snooze can also be set OFF when the "OFF" digit is being displayed.
2. Confirm with the SET button and enter the "**°C/°F temperature unit setting**" or exit the manual setting mode by pressing the SNOOZE/ SUN button.

Note: If the snooze time has been set "OFF", the snooze function will not be activated.

°C/°F TEMPERATURE UNIT SETTING




The default temperature reading is set to °C (degree Celsius). To select °F (degree Fahrenheit):

1. The "°C" will be flashing, use the CH/ + button to toggle between "°C" and "°F".
2. Once the desired temperature unit has been chosen, confirm with the SET button and enter the "**Weather forecast icon sensitivity setting**" or exit the setting mode by pressing the SNOOZE/ SUN button.


WEATHER FORECASTING ICON SENSITIVITY SETTING

For locations with rapid changes of weather conditions, the threshold can be set to a different level for faster display of changing weather conditions.

1. Using the CH/ + button to set the weather sensitivity level. There are 3 levels of setting: 1, 2 and 3; level 1 is the most sensitive setting, level 3 is the least sensitive setting (default setting is "2").

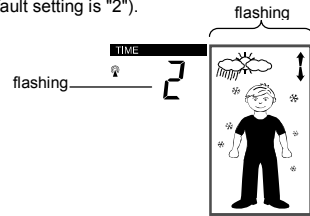

2. Confirm with the SET button and exit the **manual settings**.

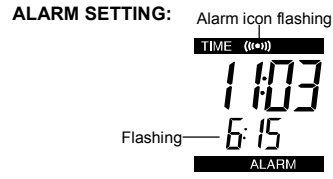

To set alarm:

1. Press and hold ALM for about 3 seconds until the alarm time display flashes.
2. The hour digit and the alarm icon will be flashing. Press the CH/ + button to adjust the hour.
3. Press ALM button once and minute digit will be flashing. User shall then press CH/ + button to set the minute.
4. Press ALM button once to confirm the setting.
5. To activate/ deactivate the alarm function, press the ALM button once. The display of the alarm icon represents that the alarm is "ON".

Note: The duration of alarm sounding is 120 seconds

SNOOZE SETTING AND STOPPING THE ALARM:






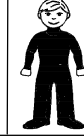




1. When the alarm is sounding, press the SNOOZE/ SUN button to activate the snooze function. The alarm will stop and re-activate after the time interval of the snooze time pre-set by user.
2. To stop the alarm completely, press any buttons other than the SNOOZE/ SUN button.

WEATHER FORECAST AND TENDENCY:

The weather forecast icons (Weather boy):

One of the 15 different weather icons (featured by Weather boy with different clothing) is displayed in the centre of LCD, which indicates the different forecast weather condition due

to air pressure level (Sunny, Sunny + Cloudy or Cloudy + Rainy) and the current outdoor temperature (temperature value detected by Channel 1):

	$\geq 26^{\circ}\text{C}$	19 – 25.9 $^{\circ}\text{C}$	10 – 18.9 $^{\circ}\text{C}$	0 – 9.9 $^{\circ}\text{C}$	$< 0^{\circ}\text{C}$
Sunny	 	 	 	 	 

	$\geq 26^{\circ}\text{C}$	19 – 25.9 $^{\circ}\text{C}$	10 – 18.9 $^{\circ}\text{C}$	0 – 9.9 $^{\circ}\text{C}$	$< 0^{\circ}\text{C}$
Sunny + Cloudy					
	$\geq 26^{\circ}\text{C}$	19 – 25.9 $^{\circ}\text{C}$	10 – 18.9 $^{\circ}\text{C}$	0 – 9.9 $^{\circ}\text{C}$	$< 0^{\circ}\text{C}$
Cloudy + Rainy					

For every sudden or significant change in the air pressure, the weather icons will update accordingly to represent the change in weather. If the icons do not change, then it means either the air pressure has not changed or the change has been too slow for the weather station to register. However, if the icon displayed is a sun or raining cloud, there will be no change of icon if the weather gets any better (with sunny icon) or worse (with rainy icon) since the icons are already at their extremes.

The icons displayed forecasts the weather in terms of getting better or worse and not necessarily sunny or rainy as each icon indicates. For example, if the current weather is cloudy and the rainy icon is displayed, it does not mean that the product is faulty because it is not raining. It simply means that the air pressure has dropped and the weather is expected to get worse but not necessarily rainy.

Note:

After setting up, readings for weather forecasts should be disregarded for the next 12-24 hours. This will allow sufficient time for the weather station to collect air pressure data at a constant altitude and therefore result in a more accurate forecast.

Common to weather forecasting, absolute accuracy cannot be guaranteed. The weather forecasting feature is estimated to have an accuracy level of about 75% due to the varying areas the weather station has been designed for use in. In areas that experience sudden changes in weather (for example from sunny to rain), the weather station will be more accurate compared to use in areas where the weather is stagnant most of the time (for example mostly sunny).

If the weather station is moved to another location significantly higher or lower than its initial standing point (for example from the ground floor to the upper floors of a house), remove the batteries and re-insert them after about 30 seconds. By doing this, the weather station will not mistake the new location as being a possible change in air-pressure when really it is due to the slight change of altitude. Again, disregard weather forecasts for the next 12 to 24 hours as this will allow time for operation at a constant altitude.

THE WEATHER TENDENCY INDICATOR

Working together with the weather icons are the weather tendency indicators (the upward and downward arrow located near the weather boy). When the indicator points upwards, it means that the air-pressure is increasing and the weather is expected to improve, but when indicator points downwards, the air-pressure is dropping and the weather is expected to become worse.


Therefore, user may see how the weather has changed and is expected to change. For example, if the indicator is pointing downwards together with cloudy icons, it means that the last noticeable change in the weather was when it was sunny (the sunny icon only). Therefore, the next change in the weather will be the cloudy icons since the indicator is pointing downwards.

Note:

Once the weather tendency indicator has registered a change in air pressure, it will remain permanently visualized on the LCD.


DISPLAY OF INDOOR TEMPERATURE AND HUMIDITY READING:

The indoor temperature and humidity are measured automatically and displayed on the fourth section of the LCD.

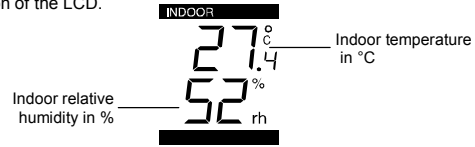

CH MIN Minimum icon

DISPLAY OF OUTDOOR TEMPERATURE:

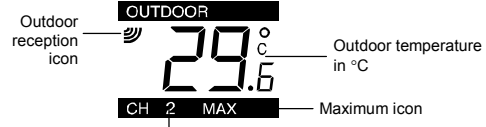

Transmitter identification No. (only shown when more than one transmitter is used)

The last LCD section shows the outdoor temperature, a reception symbol and a channel number under the temperature will also show if more than one transmitter has been used.

DISPLAY OF INDOOR MAXIMUM AND MINIMUM RECORDS:

1. In normal display mode, press the MIN/ MAX button three times. The maximum indoor temperature and humidity will be shown. Also the date and time of recording this temperature will be displayed.
2. Press the MIN/ MAX button once more to display the minimum indoor temperature and humidity. Also the date and time of recording this temperature will be displayed.

RESETTING THE INDOOR MAXIMUM/ MINIMUM RECORDS

1. In normal display mode, press the MIN/ MAX button to advance to the MIN/ MAX display.
2. Press and hold the SET button for about 3 seconds, this will reset all indoor minimum and maximum data recorded to the current time, date, temperature and humidity. The max/ min temperature of the currently selected outdoor channel will also be reset at the same time

DISPLAY OF OUTDOOR MAXIMUM AND MINIMUM RECORDS:

1. In normal display mode, press the CH/ + button to select the desired channel. The channel ID will be displayed above the outdoor temperature reading.
2. Press the MIN/MAX button, the max temperature of the selected channel will be displayed. Also the date and time of recording this temperature will be displayed.

3. Press the MIN/MAX button once more, the min temperature of the selected channel will be shown. Press the ALM button to go back to the normal display mode.


RESETTING THE OUTDOOR MAXIMUM/ MINIMUM RECORDS

Note: It is required to reset the outdoor MIN/MAX temperature records of each channels separately.

1. In normal display mode, press the CH/ + button to select a channel. The channel ID will be displayed above the outdoor temperature reading.
Note: The transmitter number will only be displayed if more than one transmitter is applied.
2. Press the MIN/ MAX button once. The max icon will be displayed.
3. Press and hold the SET button for about 3 seconds, this will reset all outdoor minimum and maximum temperature recorded to the current time, date and temperature.


Note: The MIN/MAX temperature records of the indoor channel will also be reset at the same time.

SUNSET/ SUNRISE/ SUN DURATION TIME:

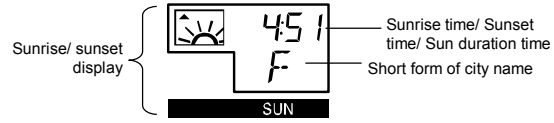


Press the SNOOZE/ SUN button to toggle between the sunrise, sunset, and sun duration time:


• **Sunrise time**

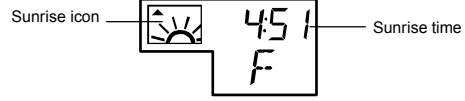

• **Sunset time**

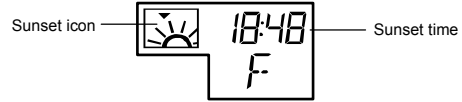


- **Sun duration time (total number of hours of sunlight on the day)**

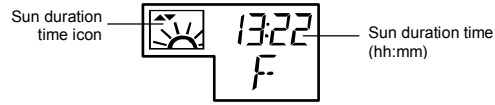

THE MOON PHASE

The moon icon of the weather station will also display 12 different moon phases according to the set calendar.

Note: In the southern hemisphere, the phases of the moon are same but the shape of the moon is mirror inverted.

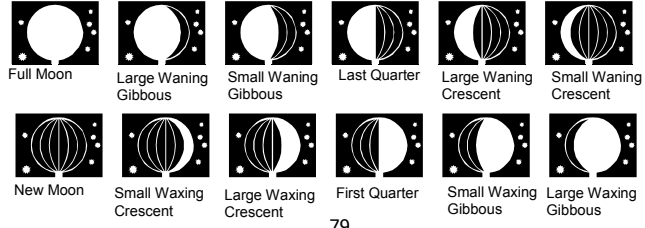

LED BACK-LIGHT

The LED back-light will be automatically switched ON when any button is pressed. The LED back-light will be switched on for approximately 9 seconds before automatically switching OFF.

TEMPERATURE TRANSMITTER:

The range of the temperature transmitter may be affected by the temperature. At cold temperatures the transmitting distance may be decreased. Please bear this in mind when placing the transmitter.

868 MHz RECEPTION

The weather station should receive the temperature data within 5 minutes after set-up. If the temperature data is not received 5 minutes after setting up (not successfully 3 times continuously, the outdoor display shows "--"), please check the following points:

1. The distance of the weather station or transmitter should be at least 1.5 to 2 meters away from any interfering sources such as computer monitors or TV sets.
2. Avoid positioning the weather station onto or in the immediate proximity of metal window frames.
3. Using other electrical products such as headphones or speakers operating on the same signal frequency (868MHz) may prevent correct signal transmission and reception.
4. Neighbours using electrical devices operating on the 868MHz signal frequency can also cause interference.


Note:

When the 868MHz signal is received correctly, do not re-open the battery cover of either the transmitter or weather station, as the batteries may spring free from the contacts and force a false reset. Should this happen accidentally then reset all units (see **Setting up** above) otherwise transmission problems may occur.

The transmission range is about 100 m from the transmitter to the weather station (in open space). However, this depends on the surrounding environment and interference levels. If no reception is possible despite the observation of these factors, all system units have to be reset (see **Setting up**).

POSITIONING THE WEATHER STATION:


The weather station may be hung onto wall easily or free standing. Choose a sheltered place. Avoid direct rain and sunshine.

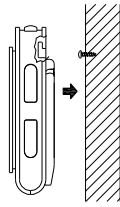


To wall mount:

1. Fix a screw into the desired wall, leaving the head extended out the by about 5mm.
2. Hang the station onto the screw. Remember to ensure that it locks into place before releasing.

POSITIONING THE TEMPERATURE TRANSMITTER:

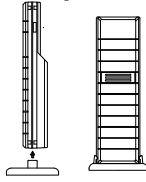

The transmitter is supplied with a holder that may be attached to a wall with the two screws supplied. The transmitter can also be position on a flat surface by securing the stand to the transmitter.

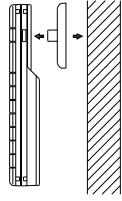

To wall mount:

1. Secure the bracket onto a desired wall using the screws and plastic anchors.
2. Clip the remote temperature sensor onto the bracket.

Note:

Before permanently fixing the transmitter wall base, place all units in the desired locations to check that the outdoor temperature reading is receivable. In event that the signal is not received, relocate the transmitters or move them slightly as this may help the signal reception.

CARE AND MAINTENANCE

- Clean the instrument and the transmitter with a soft damp cloth. Do not use solvents or scouring agents. Protect from moisture.
- Remove the batteries if you do not use the product for a lengthy period.

MALFUNCTION

Problems	Troubleshooting
No indication on the weather station	<ul style="list-style-type: none">• Ensure batteries polarity are correct• Change batteries
No transmitter reception Display "----"	<ul style="list-style-type: none">• Check batteries of external transmitter (do not use rechargeable batteries!)• Restart the transmitter and weather station as per the manual• Choose another place for the transmitter and/or the weather station• Reduce the distance between the transmitter and the weather station• Check if there is any source of interference
No DCF reception	<ul style="list-style-type: none">• Time reception setting "ON"• Choose another place for the weather station• Manual time setting• Wait for attempted reception during the night
Incorrect display	<ul style="list-style-type: none">• Change batteries

WASTE DISPOSAL

This product has been manufactured using high-grade materials and components which can be recycled and reused.



Never throw flat batteries and rechargeable batteries in household waste. As a consumer, you are legally required to take them to your retail store or to appropriate collection sites according to national or local regulations in order to protect the environment.

The symbols for the heavy metals contained are: Cd=cadmium, Hg=mercury, Pb=lead



This instrument is labelled in accordance with the EU Waste Electrical and Electronic Equipment Directive (WEEE).

Please do not dispose of this product with other household waste. The user is obligated to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment, in order to ensure environmentally-compatible disposal.

SPECIFICATIONS:

Recommended operating temperature range : +5°C to +40°C / +41°F to +104°F

Temperature measuring range:

Indoor : -9.9 to +59.9°C with 0.1°C resolution / 14.1°F to +139.8°F with 0.2°F resolution
("OF.L" displayed if outside this range)

Outdoor: -39.9 to +59.9°C with 0.1°C resolution / -39.8°F to +139.8°F with 0.2°F resolution
("OF.L" displayed if outside this range)

Relative humidity measuring range:

Indoor : 20% to 95% with 1% resolution

(Display "-" if temperature is OL.F; display "19%" if < 20% and "96%" if > 95%)

Indoor temperature checking interval : every 16 seconds

Indoor humidity checking interval : every 16 seconds

Outdoor temperature reception : every 4 seconds

Power consumption:

Weather station : 2 x AA, IEC, LR6, 1.5V

Temperature transmitter : 2 x AA, IEC, LR6, 1.5V

Battery life cycle (Alkaline batteries recommended)

Weather station : Approximately 18 months

Temperature transmitter : Approximately 24 months

Dimensions (L x W x H)

Weather station : 124.3 x 28.4 x 92.5 mm

Temperature transmitter : 38.2 x 21.2 x 128.3 mm

TFA Dostmann GmbH & Co. KG, Zum Ottersberg 12, D - 97877 Wertheim
No part of this manual may be reproduced without written consent of TFA Dostmann. The technical data are correct at the time of going to print and may change without prior notice.

DECLARATION OF CONFORMITY

Herewith we declare, that this wireless transmission device does comply with the essentials requirements of R&TTE Directive 1999/5/EC.

A copy of the signed and dated Declaration of Conformity is available on request via info@tfa-dostmann.de.

www.tfa-dostmann.de

03/12